

MANUAL OTTOMAN



Easy set up instructions for your new Ottoman bed

THIS INSTRUCTION PACK IS UNIVERSAL ACROSS THE RANGE
IMAGE USED MAYBE DIFFERENT FROM THE ONE IN PACK.



ASSEMBLY
INSTRUCTORS

Information, diagrams and steps illustrated in this Assembly Guide
are correct at the time of publication.



Introduction and components



1. Unpack in the room the bed is intended to be used, remove all packaging and dispose of carefully, keeping polythene out of the reach of children.

CONTENTS:

- 1 x Headboard
- 2 x Side Rails
- 1 x Foot board
- 2 x Baseboards
- 2 x Slatted Frames (pre slatted)
- 1 x Support Bar
- 4 x M8 Bolts
- 4 x M8 Nuts
- 3 x Fixing Bolts
- 3 x Fixing Nuts
- 6 x Washers
- 2 x Brace Bars
- 4 x Flange Nuts
- 4 x Allen Key Bolts

SAFETY FEATURES:

The slatted frame **MUST** have the mattress in place to close. Without the weight of the mattress will result in damage to the bed.

The recommended mattress weights are as follows:

- a) Double Bed 25kg - 40kg
- b) King Size Bed 35kg - 80kg
- c) Super King Bed 40kg - 100kg



DANGER – RISK OF INJURY / CRUSHING

The ottoman must only be operated by responsible and capable adults. Never allow children to operate the ottoman.



TOOLS REQUIRED

The following tools are required for this assembly
1 x Socket Set - 13mm Spanner
1 x Cross Head Screwdriver (also known as a Phillips)



CAUTION WITH ASSEMBLY


Some stages of this Bed Assembly will require two people to hold and lift components that maybe heavy.

CONTENTS


CHECK LIST - BED ASSEMBLY

Please check the pack contents before attempting to assemble this product.

If any components are missing, please contact the retailer from whom you bought this product.

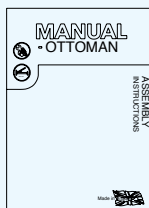

ASSEMBLY GUIDE
= x1

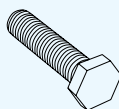


FIXING - POZIPAN
M8X50mm = x4



FIXING-NUT
M8 = x4

CHECK LIST - FRAME ASSEMBLY

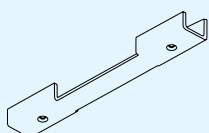


CONNECTING-BAR
= x2



FIXING-WASHER
M6X20mm = x6




FIXING-NUT
M6 = x3

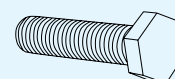

FIXING-BOLT
M6X70mm = x3



FIXING-NUT FLANG
M6-HEX = x4

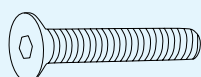

FIXING-BOLT
M6X40mm = x4

This product is HEAVY, it should be assembled as near as possible to the point of use. TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

This product takes approximately 40 MINUTES to assemble with 2 PEOPLE.

The fittings pack contains SMALL ITEMS which should be **KEPT AWAY FROM YOUNG CHILDREN.**

Read this leaflet in full before commencing assembly.




**FOR SLATTED SLATTED FRAME OPTION, FOLLOW STEPS BELOW
FOR BISCUIT PLATFORM OPTION SKIP TO STEP 7**


**We recommend flipping the slatted frames for easier access to bolt holes.*

2. Your slatted frame will arrive in two sections and are **required to be connected together** by following the next steps.

3. On each of the points - use **one** fixing bolt **two washers** and **one fixing nut** to secure the frame together.

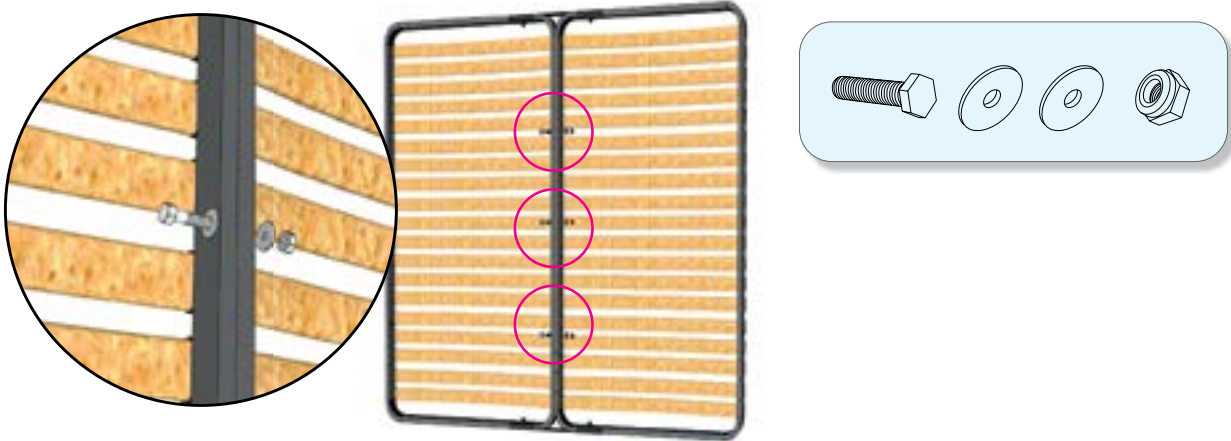


4. Place the two brace bars onto the slatted frame at each end. These are fixed by the allen key bolts supplied in the bag.

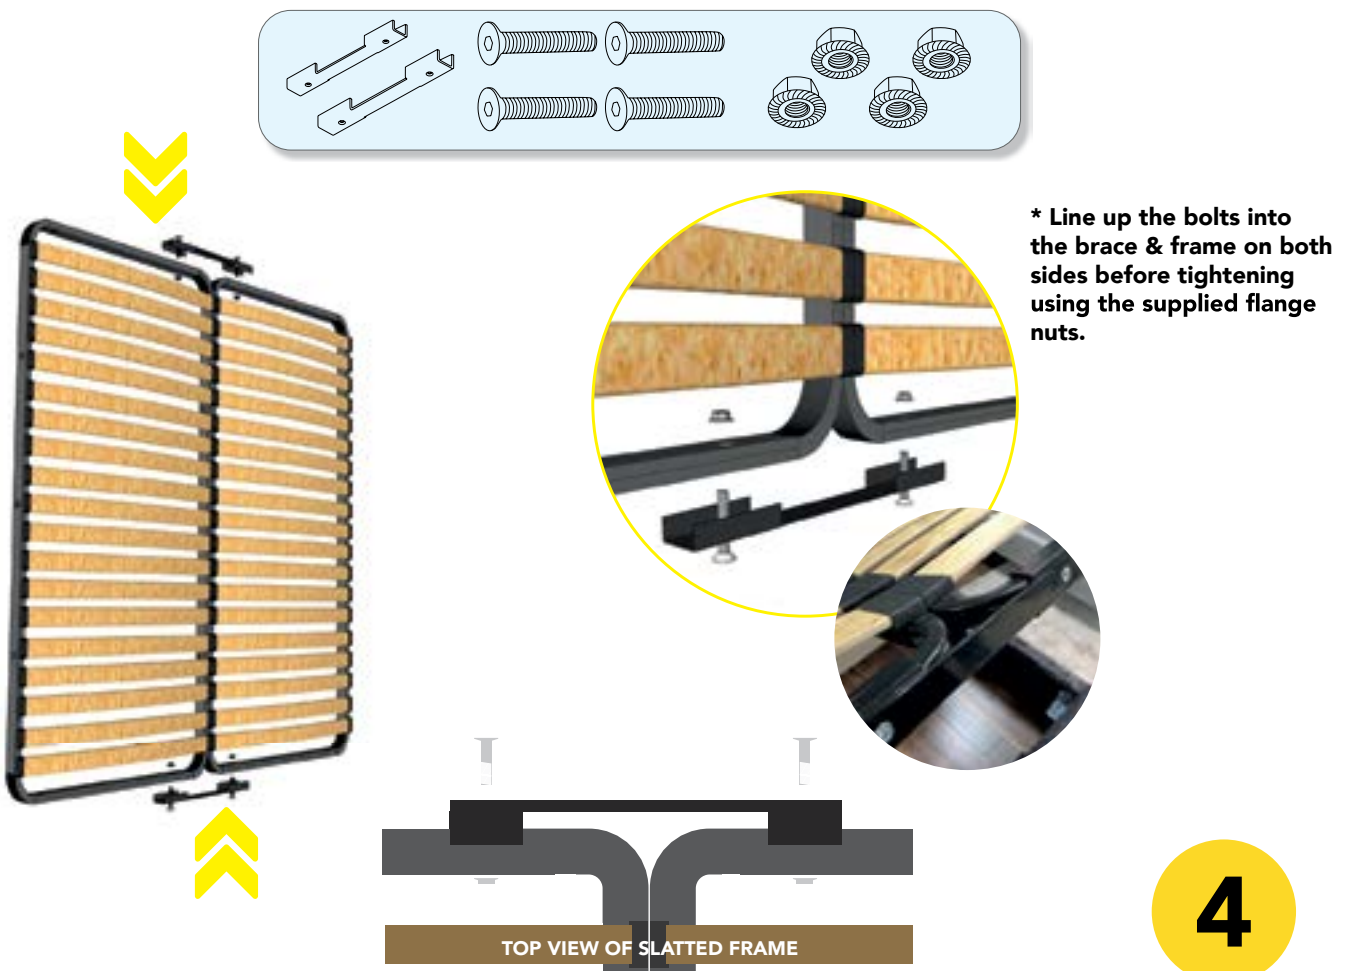

The hinge brackets will already be fixed into place.

Please Note: You are required to follow the steps as detailed to make sure that the bed is correctly set up.


Left Hand Bracket

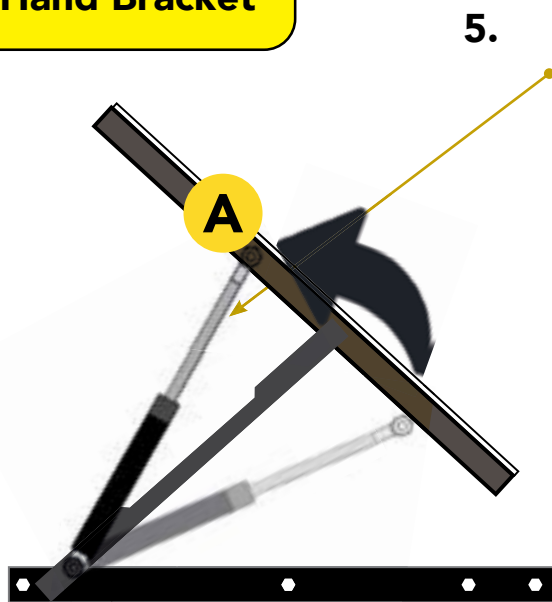

5.

- 1 . Remove the M8 Nut on position **A**
- 2 . Move the gas strut into the position **A**
- 3 . Place the M8 Nut and tighten with 13mm Spanner

Right Hand Bracket

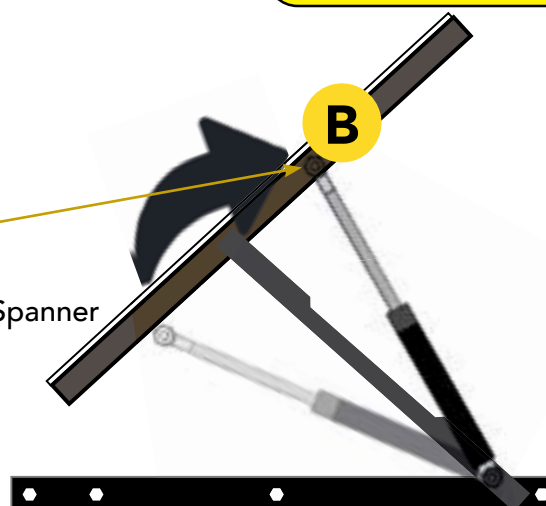

6.

- 1 . Remove the M8 Nut on position **B**
- 2 . Move the gas strut into the position **B**
- 3 . Place the M8 Nut and tighten with 13mm Spanner



**** IF YOUR BED IS SUPPLIED WITH HIGH FOOTBOARD, YOU NEED TO SCREW THE SUPPLIED LEGS TO THE BOTTOM OF THE HEADBOARD & FOOTBOARD**



Please Note: this step will require two people and requires lifting.




7. Connect the side rails to the **head board** sliding the bolts into the brackets and tightening with spanner or appropriate socket set.

Then proceed to connect the footboard to both of the siderails by sliding the bolts into brackets and tightening with the correct size spanner.

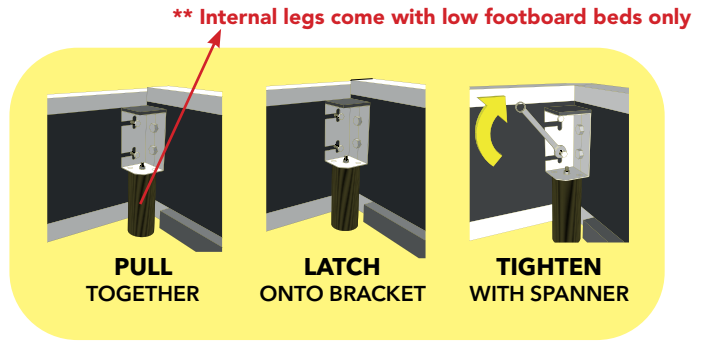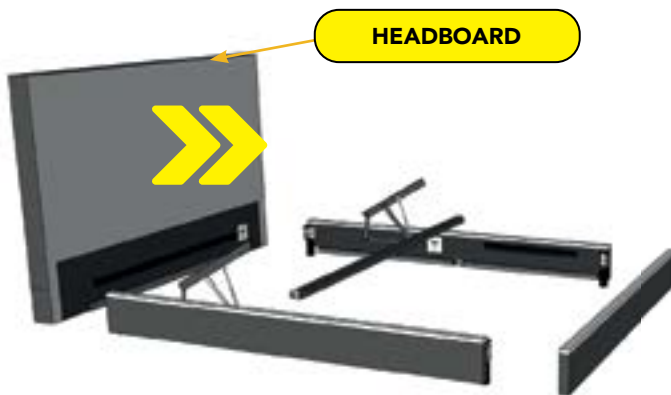

****Do not tighten bolts to one side until step 7**

8. Lower the **support bar** into the middle section of the bed.

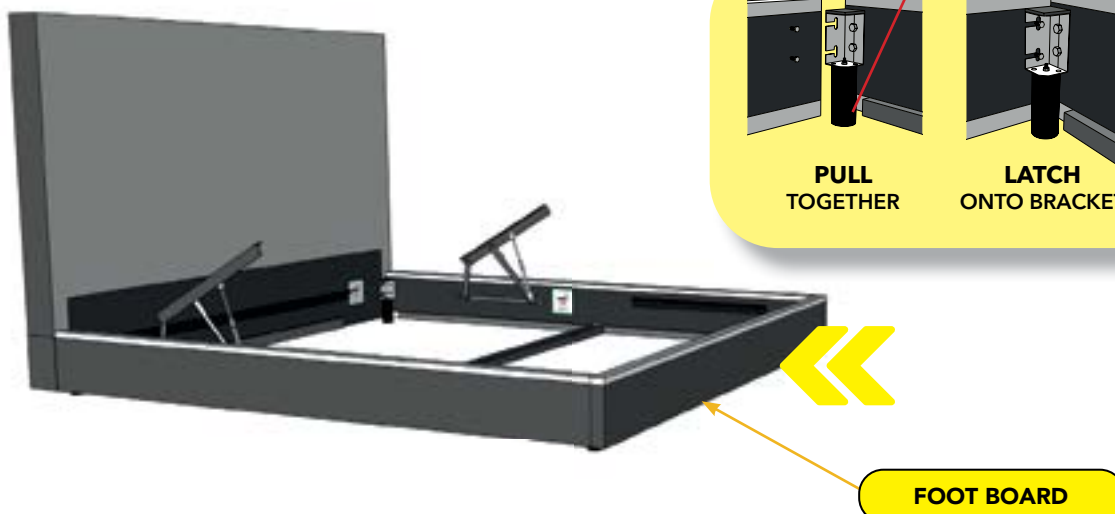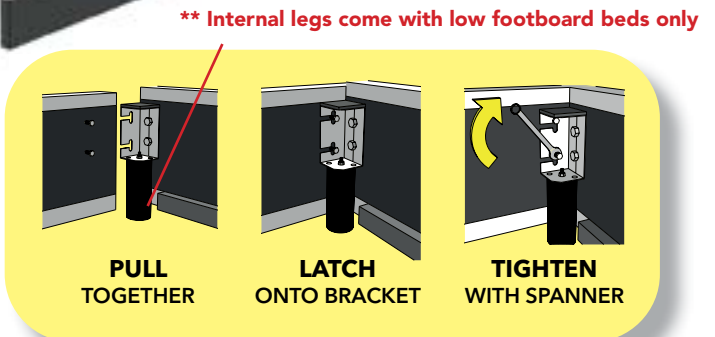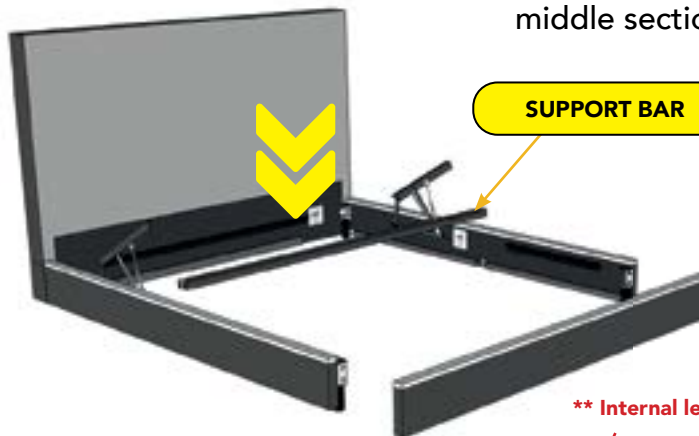




Please Note: this step will require two people and requires lifting.



9. Lower the **first** base board into place with the angled cut corners against the head board (as shown above).


10. Lower the **second** base board into place with the angled cut corners against the head board (as shown below).

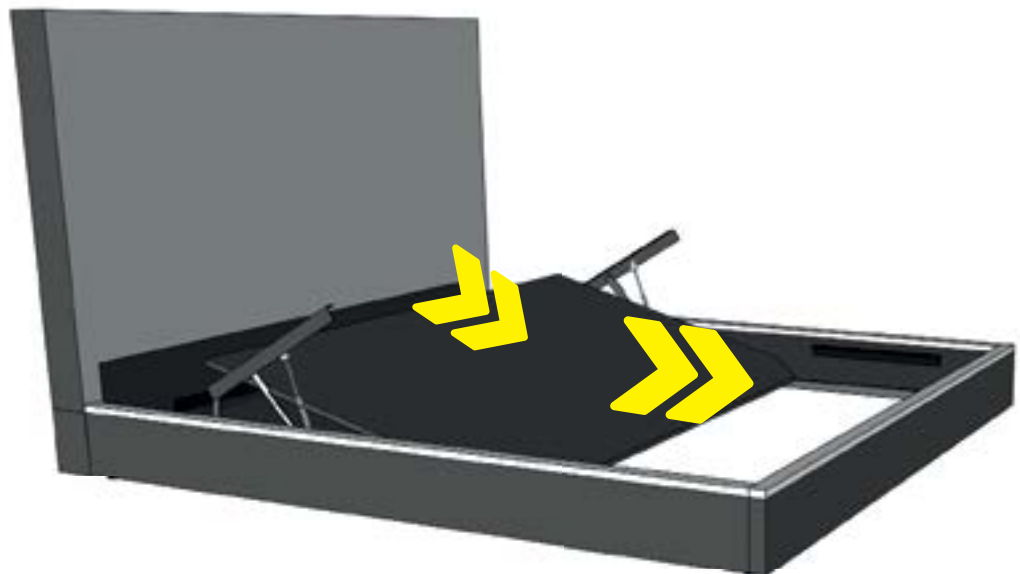



Please Note: this step will require two people and requires lifting.

11. With help, lower the slatted base onto the two rails (attached to the hinge). **Make sure that the welded retaining brackets are at the headboard end.**

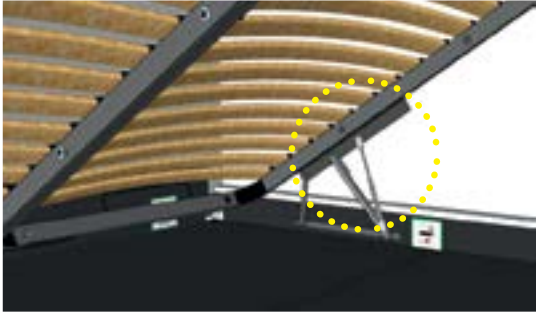


Please make sure you thread this hole first on each side, as this will help line up the frame and prevent damage.




Please Note: The hinge bracket has been pre-threaded.

12. Using the 4 x M8 Bolts, attach the slatted frame to each of the hinge brackets; 2 x M8 Bolts to each hinge.

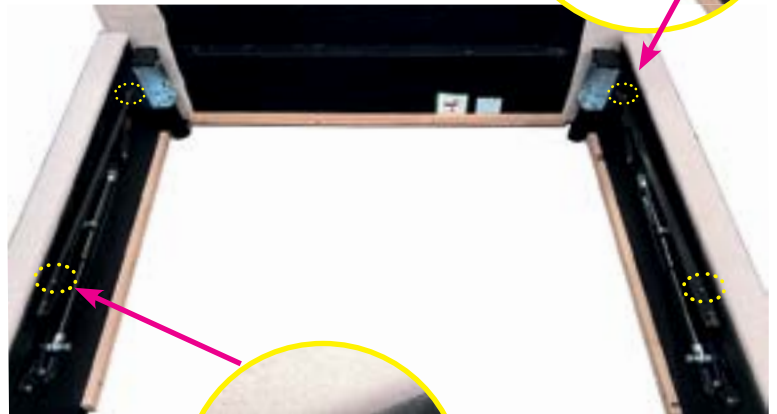

Please make sure you thread this hole on each side. **DO NOT USE** the end two holes.

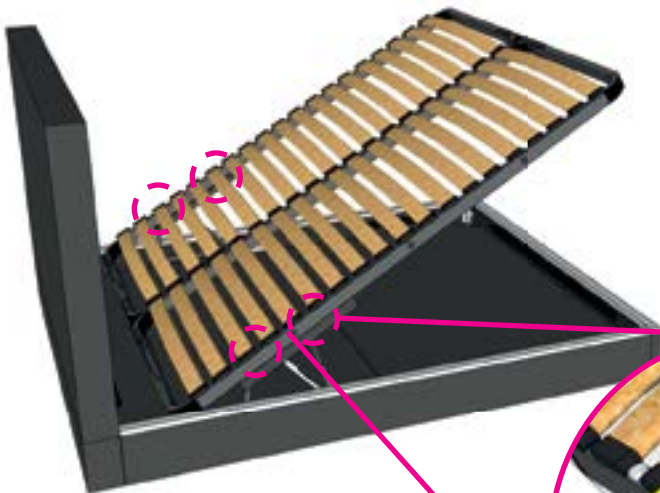

YOUR BED WILL ONLY LOWER ONCE THE MATTRESS IS IN PLACE

50

YEARS OF
EXPERIENCE & EXPERTISE



ESTABLISHED 1968

Hestia[®]
LIVING

HANDMADE UPHOLSTERED
LUXURY SINCE 1968



We're so confident in the quality of our workmanship that every upholstered bed comes with our 7 Year Frame and Frame Construction Guarantee. This covers the timber frame and frame construction on models. In addition, all motion mechanisms, electric motors and power packs come with a 5-year warranty.

Our skilled craftsmen have created furniture of outstanding quality for over 50 years and we hope you enjoy its comfort and style for many years to come.

